

# COMMERCIAL TRAINING TOOLBOX TIPS

## Lennox CORE Service App Test and Balance/Blower Setup

Applies to Lennox Model L and Enlight Rooftop Units 3-25 tons



### Helpful Resources

1. Download installation and service literature from [LennoxCommercial.com](http://LennoxCommercial.com) or [LennoxPros.com](http://LennoxPros.com).
2. [CORE Service App Reference Guide](#) takes you step-by-step through the startup and commissioning procedures.
3. Log in to LennoxPros.com to start the online [CORE Service Curriculum](#).
4. View [Lennox Model L and CORE Control System](#) videos on YouTube.

### Required Tools

1. Download the CORE Service App to your mobile devices by scanning these QR codes.



The startup technician will use the CORE Service App to setup the unit for operation. Configure Blower Airflow using the Test and Balance menu.

Pair a mobile device to the Lennox CORE Control System to perform the blower setup steps.

See the excerpt from the [CORE Service App Reference Guide](#) below. Complete instructions are included in the guide.

The screenshot sequence illustrates the steps to access the Blower Test and Balance menu in the CORE Service App. It starts with the Unit Operation Overview screen, where the Menu button is highlighted. The next screen shows the BTU Menu with 'Test and Balance' circled. The final screen shows the Blower Test and Balance settings, where blower speed values (CFM) are displayed and can be adjusted using + and - buttons.

Self-Service Technical Support with No Wait Times  
Click on the black logos below to download these apps

Download all [Training Toolbox Tips](#)  
Register for [Technical Training Webinars](#)

