



AA

BB

CC


DD

EE

FF


KEY LIST		
LOCATION		COMPONENT DESCRIPTION
CC07	A2	SENSOR, ELECTRONIC THERMOSTAT
DD06	A24	CONTROL, OUTDOOR AIR FLOW CFM
FF06	A34	TRANSDUCER, BUILDING PRESSURE
AA05	A55	CONTROL BOARD, MAIN
EE07	A63	SENSOR, CO2 (IAQ) OPTIONAL
DD06	A91	SENSOR, HUMIDITY
BB02	A171	SENSOR ONE, SMOKE DETECTOR, RETURN AIR
BB03	A172	SENSOR TWO, SMOKE DETECTOR, SUPPLY AIR
AA01	A173	CONTROL MODULE, SMOKE DETECTOR
CC03	F/A	FIRE ALARM CONTACT
CC07	K27	RELAY, TRANSFORMER
AA08	K55	RELAY, BLOWER (SUPERMARKET REHEAT)
DD04	S27	SWITCH, FILTER
BB04	S42	SWITCH, OVERLOAD RELAY BLOWER MOTOR
DD04	S52	SWITCH, AIRFLOW
AA07	S86	SWITCH, DEHUMIDISTAT
EE03	S149	SWITCH, OVERFLOW ONE

01

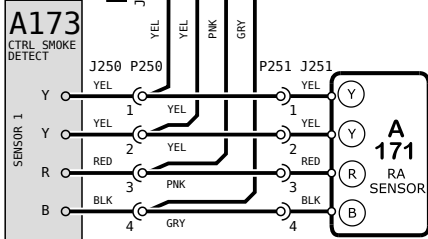


02


03

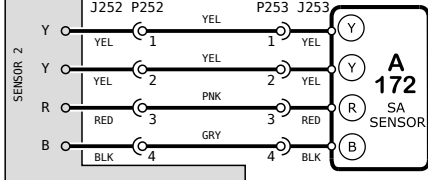


04

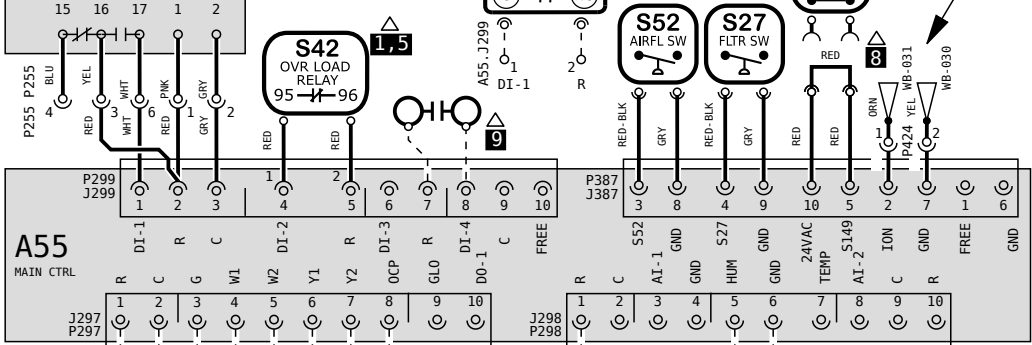


05

 


06

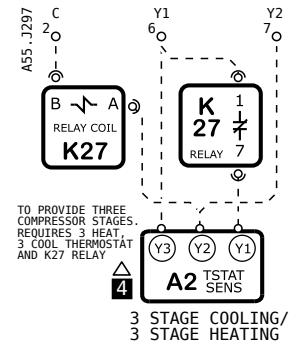


07

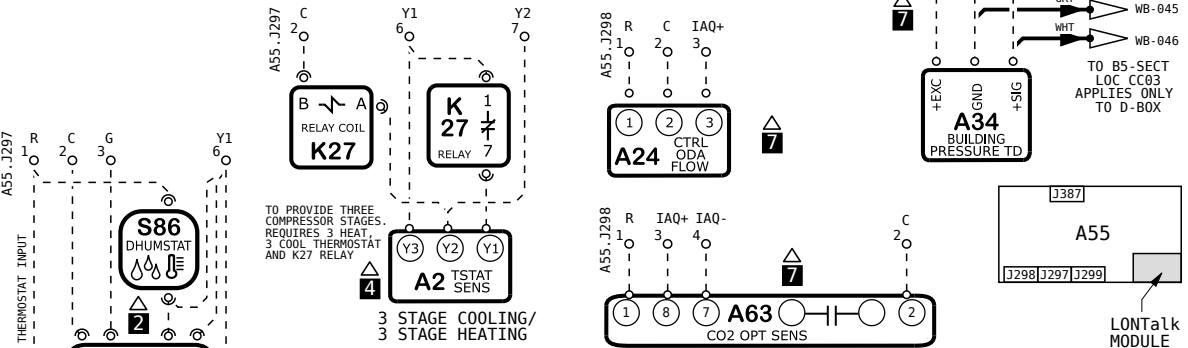

08

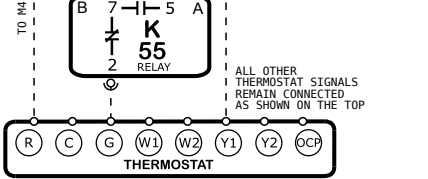

09

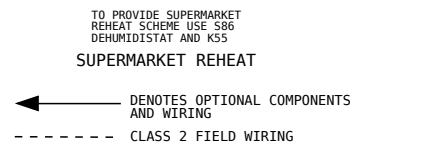

NOTES	
1	FOR MOTORS WITH S42 EXTERNAL OVERLOAD LESS INVERTER, SEE INVERTER WITH BY PASS FOR S42 HOOK UP
2	USE S86 DEHUMIDISTAT AND K55 FOR OPTIONAL SUPERMARKET REHEAT SCHEME, PRODIGY PARAMETERS NEED TO BE MODIFIED UNDER THE SETTINGS MENU OR VIA UC SOFTWARE FOR SIMULTANEOUS HEATING AND COOLING
3	P297-10 (SR) IS SERVICE RELAY OUTPUT (24VAC) IF USED CONNECT TO AN INDICATOR LIGHT
4	THERMOSTAT HOOKUP FOR PROGRAMMABLE CONFIGURATION OF THE BOARD (A55)
5	CORE CONTROLLER SETTINGS MUST BE MODIFIED WHEN S42, S52, S149 ARE INSTALLED
6	CONNECT P252 OF A172 SENSOR TO J261 ON SUPPLY AIR SMOKE DETECTOR ONLY
7	FROM A63, A34 & A24, ONLY ONE CAN BE USED AT A TIME TO CONNECT TO J298
8	REMOVE JUMPER TO INSTALL S149
9	EXTERNAL HUMIDITROL CONTACTS


10

Model: LC, LG, LH, LD Series RTU
Thermostat
Voltage: All Voltages
Supersedes: 538078-01 Form No: 538078-02 Rev: 0

HEATING	COOLING	COOLING	ACCS	ACCS
SECTION A	SECTION B	SECTION B3/5	SECTION C	SECTION D

WIRING DIAGRAM FLOW

 © 2019



REV	EC NO.	DATE	BY	APVD	REVISION NOTE
---	CN-012295C	04-03-2024	MXR6	MXT5	ORIGINATED AT PD&R CARROLLTON, TX



AA

BB


CC

DD


EE

FF


01

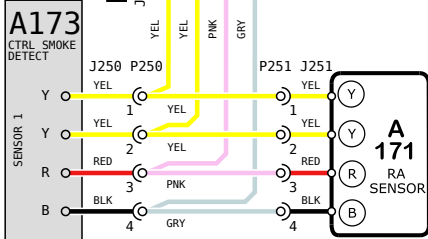


02

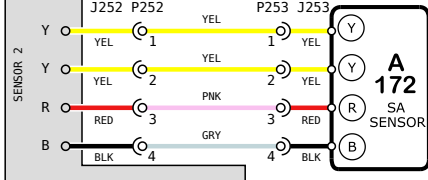


03

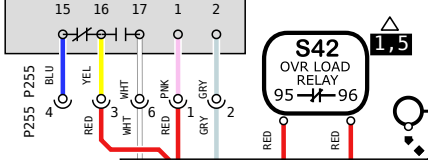


04

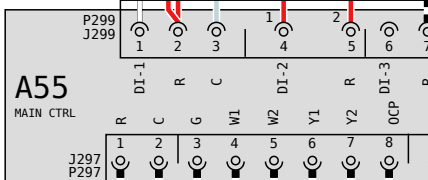


05

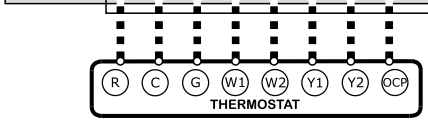


06

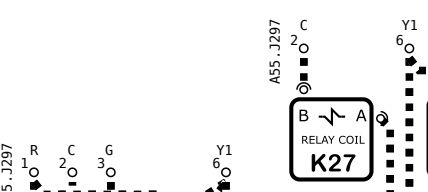


07

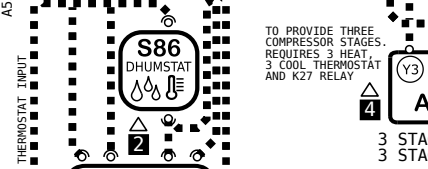

08

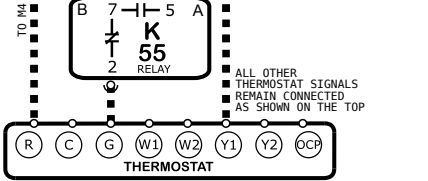

09

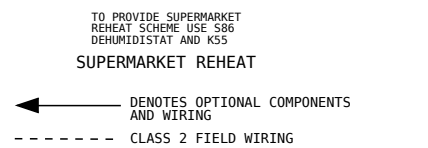


10

Model: LC, LG, LH, LD Series RTU Thermostat
Voltage: All Voltages
Supersedes: 538078-01 Form No: 538078-02 Rev: 0

KEY LIST table with columns LOCATION and COMPONENT DESCRIPTION. Includes items like CC07 A2 SENSOR, DD06 A24 CONTROL, FF06 A34 TRANSDUCER, etc.

NOTES table with 9 numbered notes regarding motor wiring, dehumidistat settings, service relay output, and component modifications.

 WIRING DIAGRAM FLOW table with columns HEATING, COOLING, COOLING, ACCS, ACCS and sub-sections A, B, B3/5, C, D.



Revision table with columns REV, EC NO., DATE, BY, APVD, REVISION NOTE. Shows revision 1 dated 04-03-2024 by MXR6 and MXT5.