


BLOWER SPEED CHART

UNIT	HEAT	COOL	ADJUST
FACTORY DEFAULT	TO N	TO L	FACTORY DEFAULT
AL	TO R OR H ON CS7000	TO L	

- NOTE: SEE INSTALLATION INSTRUCTIONS FOR PROPER TO SET CORRECT BLOWER SPEED FOR HEATING AND COOLING. TYPICAL SYSTEM SHOWN FOR 2 HEAT/COOL WITH A CONVENTIONAL THERMOSTAT. SEE INSTALLATION INSTRUCTIONS FOR CONNECTIONS TO OTHER EQUIPMENT AND ACCESSORIES.**
- ▲ L13 USED ON HP ONLY
 - ▲ FACTORY DEFAULT IS FOR A 2-STAGE THERMOSTAT
 - ▲ FIELD SUPPLIED ACC WIRE
 - ▲ USE COPPER CONDUCTORS ONLY
 - ▲ DISCHARGE AND OUTDOOR AIR TERMINALS ARE FOR LOUVER USE ONLY
 - ▲ THERMINAL CONNECTIONS ARE FOR REFER TO COMMUNICATING SYSTEMS ONLY. INSTRUCTIONS FOR COMMUNICATING SYSTEMS.
 - ▲ DH AND L TERMINALS ARE ONLY USED WITH LOUVER THERMOSTATS

- CHARACTERISTICS**
- | MODEL | SIZE ON (INDOOR ONLY) | BLOWER |
|----------|-----------------------|--------|
| 080NV36A | 1/2 HP | 1 HP |
| 080NV48A | 1 HP | 1 HP |
| 080NV60C | 1 HP | 1 HP |
| 100NV60C | 1 HP | 1 HP |
- 25 AMP HOMERUN VALVE**

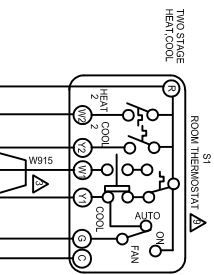

LENNOX HEATING UNITS-GAS

SL280UH080NV36A SL280UH100NV60C
 SL280UH080NV48B SL280UH100NV60C
 SL280UH080NV60C

2 HEAT/2 COOL

Supplemental

Form No. 537868-01

© 2010 Lennox U.S.A.

WARNING:
 ELECTRIC SHOCK HAZARD CAN CAUSE INJURY OR DEATH. UNIT MUST BE GROUNDED IN ACCORDANCE WITH NATIONAL AND LOCAL CODES.
 NOTE: WIRE IN THIS APPLIANCE IS DESIGNED TO BE REPLACED WITH WIRE OF LIKE SIZE, RATING, INSULATION THICKNESS, AND TERMINATION

